


GLORA


INSTALLATION GUIDE

This product must be fitted only by a fully qualified installer.

DESCRIPTION	ILLUSTRATION	DESCRIPTION	ILLUSTRATION
Radiator x1		Fixing choose the appropriate fixing for the wall material if required	
Brackets x4		PTFE tape	
Wall Anchors x 4		Electric drill	
Washers x4		Masonry drill bit appropriate to the fixings	
Washers x4		Adjustable spanner	
Fixing Screws x4		Radiator valve hex key	
End plug x1		Flat head and philips head screw drivers	
Security Screws x4		1 lock shield valve and 1 gate or thermostatic valve	
Air vent x1		Spirit level	
		Measuring tape	

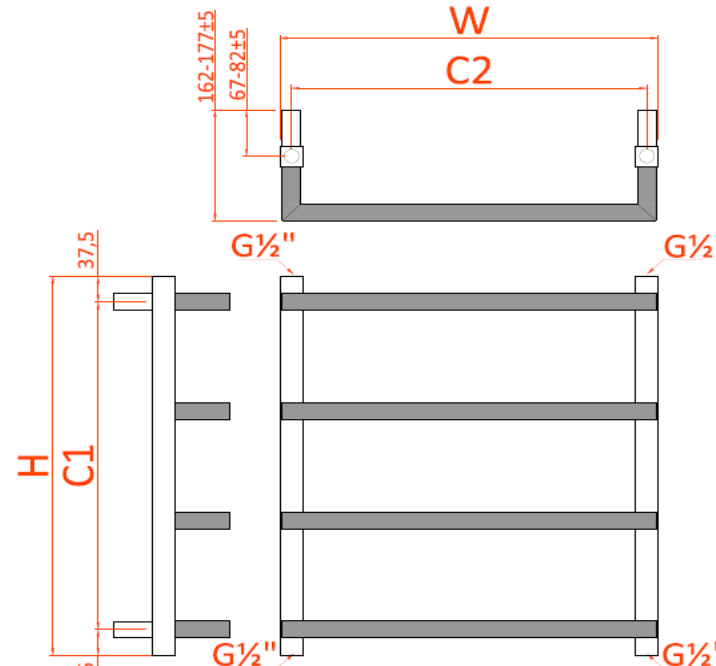

HEIGHT (H)	WIDTH (W)	CONNECTION AXIS (C1) X (C2)
555mm	500mm	480mm X 470mm
875mm	500mm	800mm X 470mm
1195mm	500mm	1120mm X 470mm

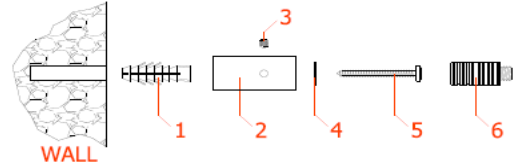

- A** The radiator should not be mounted closer than 50mm below any overhanging surface (i.e shelf) and no lower than 100mm from the floor. Transfer the bracket drill position measurements to the wall.
- B** Drill the wall and insert wall anchors (1) (or other suitable fixings).
- C** Put the brackets (2) on the wall and screw them to the wall anchors (1) with fixing screws (5) and washers (4).
- D** Screw the brackets (6) onto the nuts welded on the back of the radiator.
- E** Insert brackets (6) into the brackets (2) and tighten the security screws (3)

GENERAL RECOMMENDATION

- Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil, etc.
- When the system water pH is outside the 5,5-8,5 range and/or when the dissolved is above 0,1mg/litre, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (silicon rubber too).
- In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.
- If the system water exceeds 50°C, please install a warning mark near the radiator to avoid any accidental scalding.
- Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical agents during cleaning operations. It is prohibited to climb on the radiator.
- Maximum working temperature 95°C, maximum working pressure 4 bar.