



# NEVAL (for 7 and 10 tubes) INSTALLATION GUIDE



This product must be fitted only by a fully qualified installer.

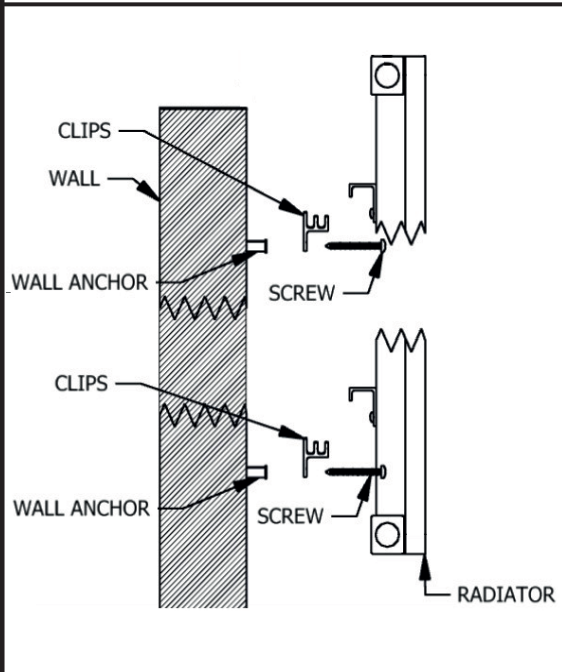


CLIPS 2 PCS	
WALL ANCHORS 4 PCS	
FIXING SCREWS 4 PCS	
CAP 2 PCS	
END PLUG 1 PCS	
AIR VENT 1 PCS	
RUBBER 2 PCS	

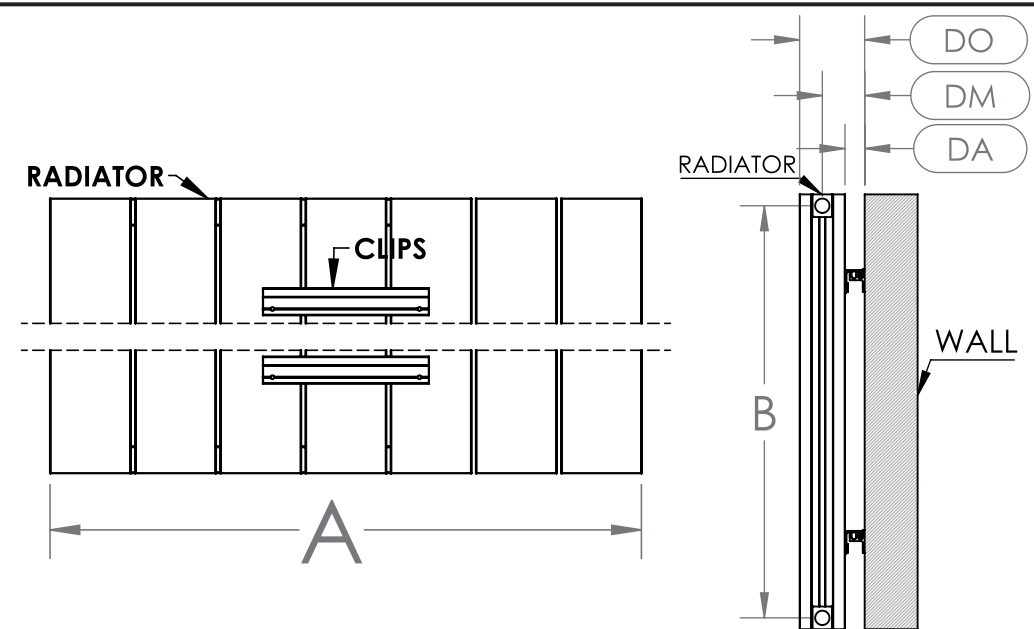

*This picture represents behind look of a double type radiator with 7 tubes.*

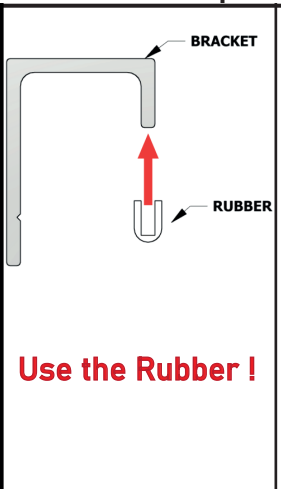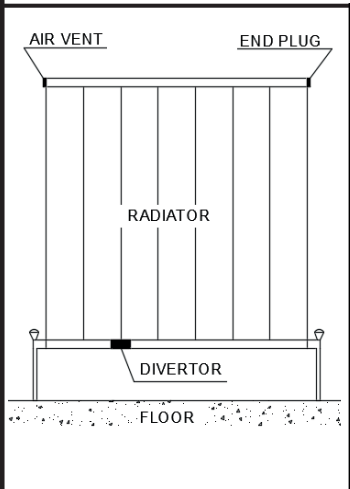

**Use the Rubber !**

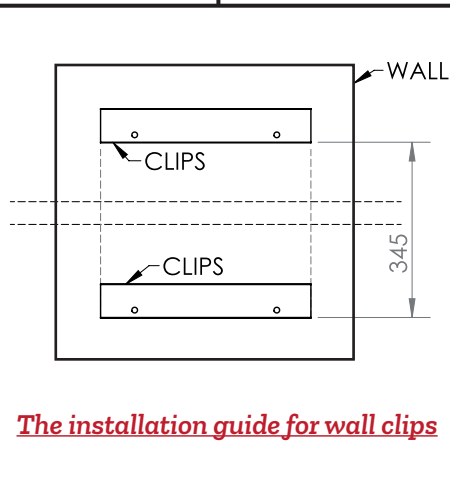

*The installation guide for wall clips*


NAMES		A	B	TUBE QTY	DA	DM	DO
NEVAL (SINGLE)	600	404	545	7	22	35	73
NEVAL (SINGLE)	600	581	545	10	22	35	73
NEVAL (DOUBLE)	600	404	545	7	26	65	103
NEVAL (DOUBLE)	600	581	545	10	26	65	103

## GENERAL RECOMMENDATION


- Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil, etc.
- When the system water pH is outside the 8,5-5,5 range and/or when the dissolved is above 0,3mg/liter, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (silicon rubber too).
- In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.
- If the system water exceeds °50C, please install a warning mark near the radiator to avoid any accidental scalding.
- Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical againts during cleaning operations. It is prohibited to climb onthe radiator.
- Maximum working temperature °95C, maximum working pressure 4 bar.

# NEVAL (for 14,17, 20,24 tubes) INSTALLATION GUIDE




This product must be fitted only by a fully qualified installer.

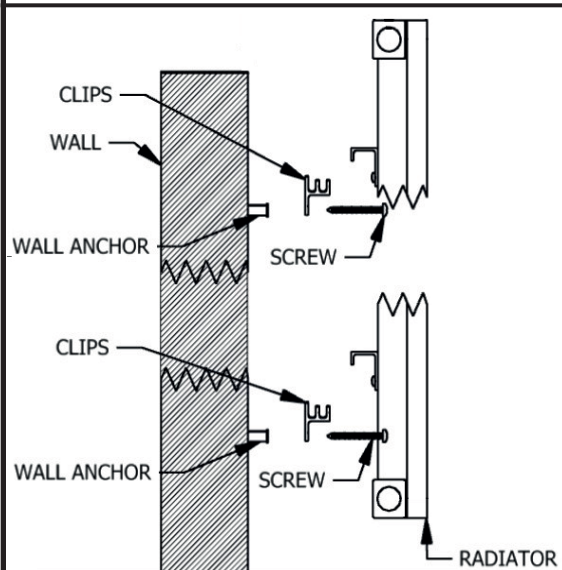

CLIPS 3 PCS	
WALL ANCHORS 6 PCS	
FIXING SCREWS 6 PCS	
CAP 2 PCS	
END PLUG 1 PCS	
AIR VENT 1 PCS	
RUBBER 3 PCS	

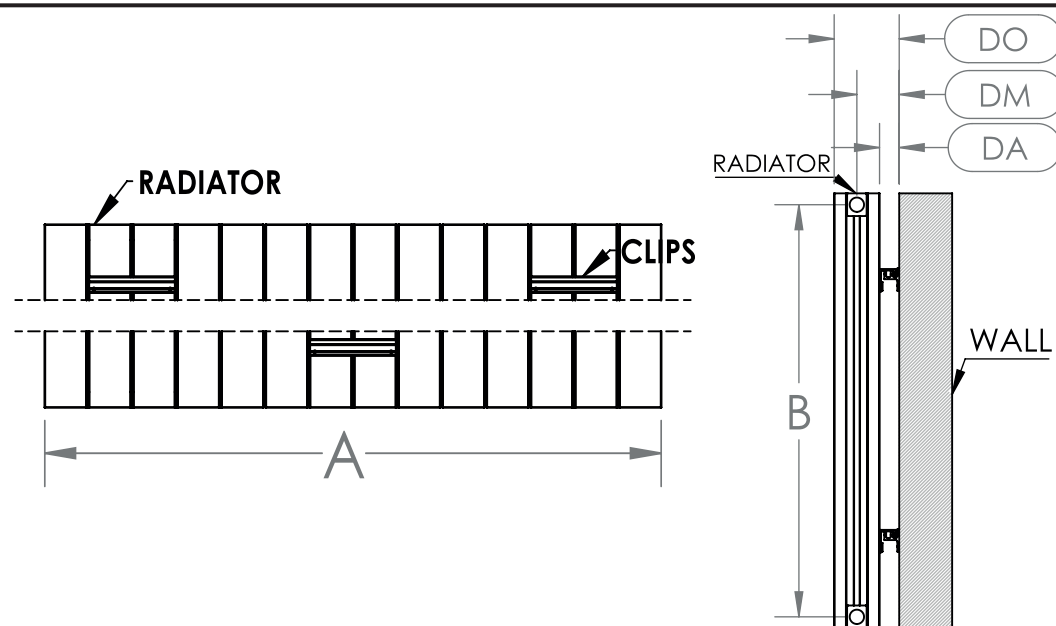

*This picture represents behind look of a double type radiator with 14 tubes.*

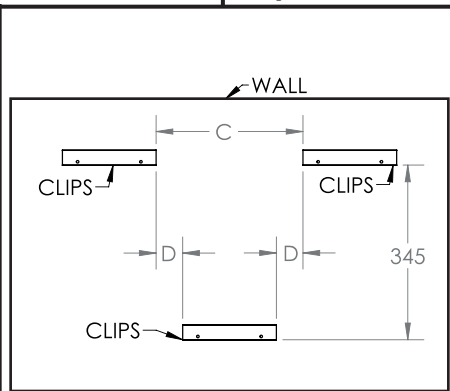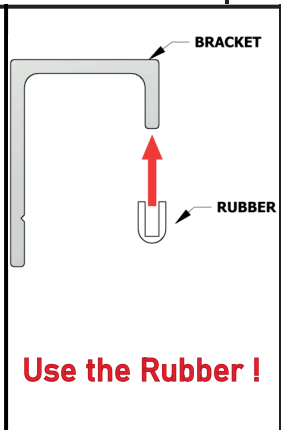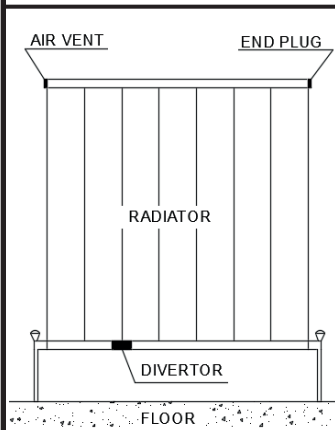

*The installation guide for wall clips.*

NAMES		A	B	C	D	TUBE QTY	DA	DM	DO
NEVAL (SINGLE)	600	817	545	285	50	14	22	35	73
NEVAL (SINGLE)	600	994	545	465	140	17	22	35	73
NEVAL (SINGLE)	600	1171	545	640	230	20	22	35	73
NEVAL (SINGLE)	600	1407	545	875	345	24	22	35	73
NEVAL (DOUBLE)	600	817	545	285	50	14	26	65	103
NEVAL (DOUBLE)	600	994	545	465	140	17	26	65	103
NEVAL (DOUBLE)	600	1171	545	640	230	20	26	65	103
NEVAL (DOUBLE)	600	1407	545	875	345	24	26	65	103

## GENERAL RECOMMENDATION

- Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil, etc.
- When the system water pH is outside the 8,5-5,5 range and/or when the dissolved is above 0,1mg/liter, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (silicon rubber too).
- In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.
- If the system water exceeds 50°C, please install a warning mark near the radiator to avoid any accidental scalding.
- Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical agents during cleaning operations. It is prohibited to climb on the radiator.
- Maximum working temperature 95°C, maximum working pressure 4 bar.